



Quad-Wheel Kit Installation Instructions Part # 1045



Contents

Qty.	Part #	Description
1	2576	Quad Frame
2	2079	Flat-Free Tire
2	2516	Tire Spindle
2	2518	1/4" Screw

Questions?
Problems?
Missing Parts?

DO NOT contact or return
this item to the retailer.

Seek factory assistance
using the information below.

Customer Hotline:

1-866-523-2363

MON- FRI, 8am to 5pm CST

customerservice@rapidreel.com

MON- FRI, 8am to 5pm CST

www.rapidreel.com

24/7/365

2009© Eley Corporation
P.O. Box 22640 Lincoln, NE 68542
Patent Pending

Step 1

Using the long hex key wrench that came with the cart reel, remove the first screw that attaches the cart bumper.



Step 2

Remove the second screw.



Step 3

Remove the front bumper from the cart frame.



Step 4

Insert the new quad-wheel bumper into the cart frame.



Step 5

Re-insert one of the screws and tighten.




Step 6

Re-insert the second screw and tighten.



Step 7

Remove the small screws from the two tire spindles. You may need to use the hex key wrenches to loosen if they're too tight.

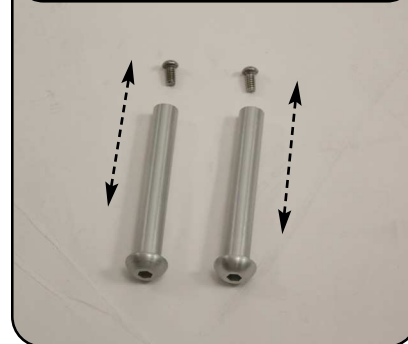

Step 8

Slide a tire spindle through one of the tire's hubs.



Step 9

Slide the tire spindle into the large hole in the frame. Align the tire spindle with the small hole on the inside of the bumper frame and thread the small screw back into the tire spindle.



Step 10

Tighten the small screw into the tire spindle using the long hex key wrench.



Step 11

Repeat steps 8 thru 10 for the second tire.

